

# PCMflash module 95

Toyota/Lexus Gen4


## Contents/Оглавление

Contents/Оглавление.....	2
M20A-FKS/M20C-FKS .....	3
S20A-FTS/T24A-FTS.....	4
V35A-FTS .....	5

# PCMflash

Engine Control Unit

M20A-FKS/M20C-FKS

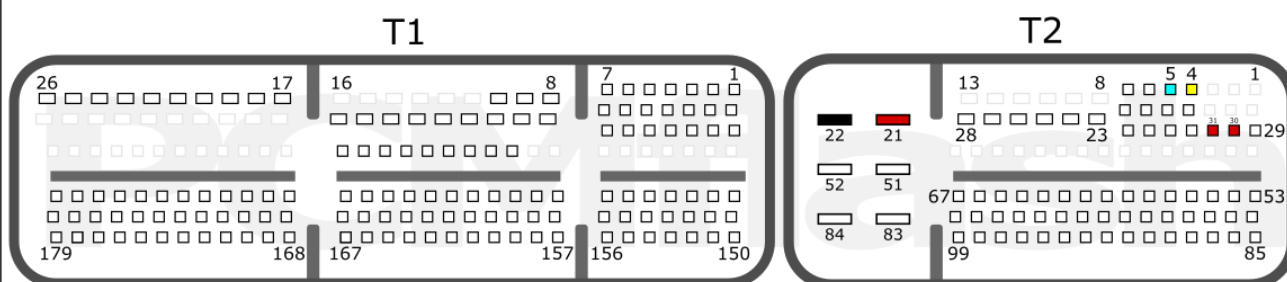

<b>+12V</b>	T2: 21, 30, 31	<b>CAN-L</b>	T2: 5
<b>GND</b>	T2: 22	<b>CAN-H</b>	T2: 4

TOYOTA/LEXUS

pcmflash.ru

v.2


2024-09-19

# PCMflash

Engine Control Unit


## S20A-FTS/T24A-FTS

### S20A-FTS/T24A-FTS

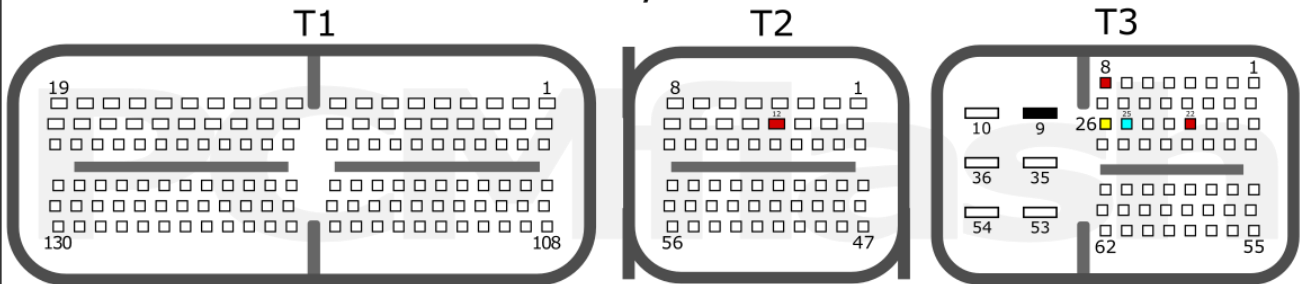

<b>+12V</b>	T2: 12; T3: 8, 22	<b>CAN-L</b>	T3: 25
<b>GND</b>	T3: 9	<b>CAN-H</b>	T3: 26

### T24A-FTS

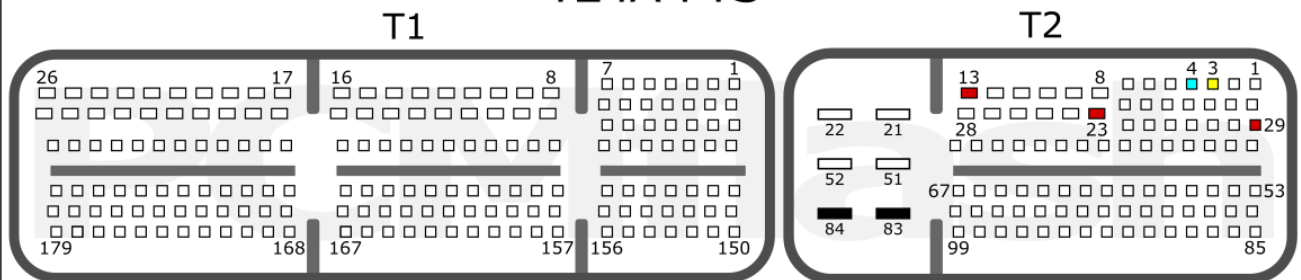

<b>+12V</b>	T2: 13, 23, 29	<b>CAN-L</b>	T2: 4
<b>GND</b>	T2: 83, 84	<b>CAN-H</b>	T2: 3

TOYOTA/LEXUS

pcmflash.ru


v.1

2024-12-11

# PCMflash

Engine Control Unit

## V35A-FTS

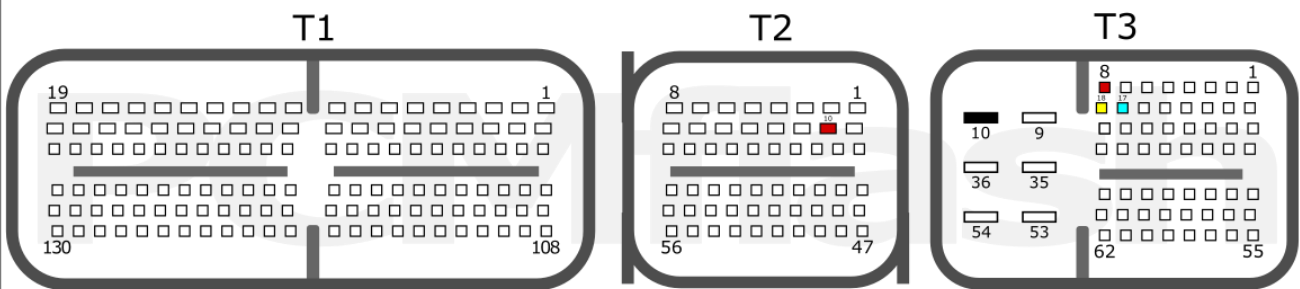

<b>+12V</b>	T2: 10; T3: 8	<b>CAN-L</b>	T3: 17
<b>GND</b>	T3: 10	<b>CAN-H</b>	T3: 18

TOYOTA/LEXUS

pcmflash.ru

v.4

2024-12-11