

# PCMflash module 95

Toyota/Lexus Gen4


## Contents/Оглавление

Contents/Оглавление.....	2
1GD-FTV.....	3
M20A/A25A/A25B .....	4
S20A-FTS/T24A-FTS.....	5
V35A-FTS .....	6

# PCMflash

Engine Control Unit

## 1GD-FTV

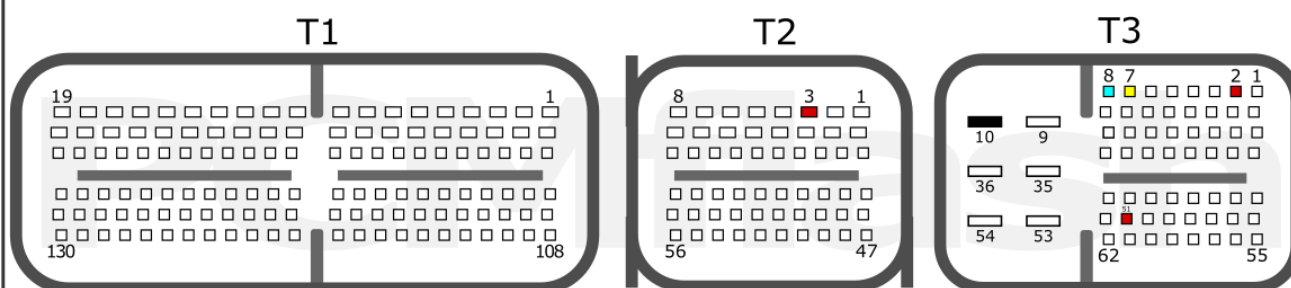

<b>+12V</b>	T2: 3; T3: 2, 51	<b>CAN-L</b>	T3: 8
<b>GND</b>	T3: 10	<b>CAN-H</b>	T3: 7

TOYOTA/LEXUS

pcmflash.ru

v.1


2025-04-15

# PCMflash

Engine Control Unit

## M20A/A25A/A25B

### TYPE 1

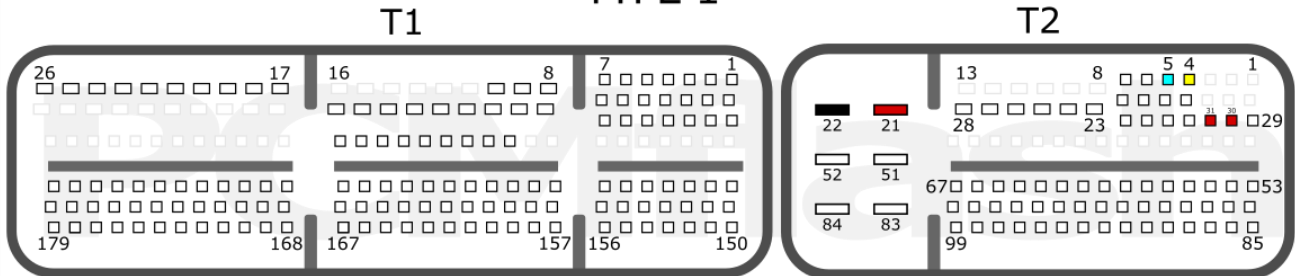


<b>+12V</b>	T2: 21, 30, 31	<b>CAN-L</b>	T2: 5
<b>GND</b>	T2: 22	<b>CAN-H</b>	T2: 4

### TYPE 2



<b>+12V</b>	T2: 1, 9, 14	<b>CAN-L</b>	T2: 8
<b>GND</b>	T3: 10	<b>CAN-H</b>	T2: 7

### TYPE 3

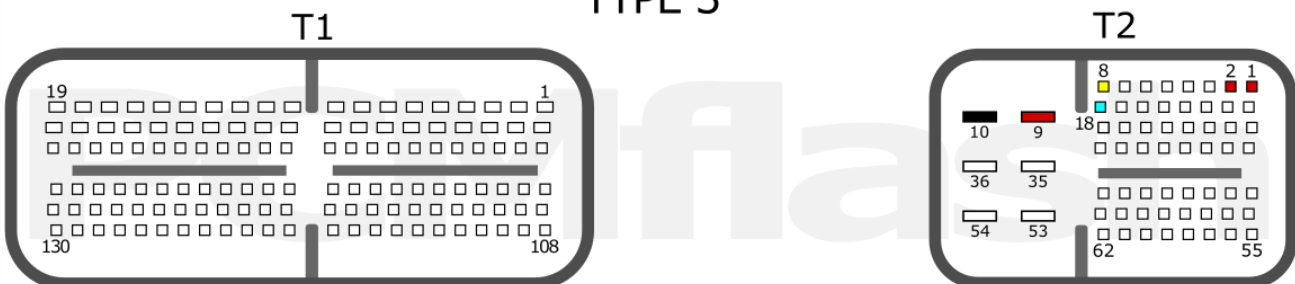

<b>+12V</b>	T2: 1, 2, 9	<b>CAN-L</b>	T2: 18
<b>GND</b>	T3: 10	<b>CAN-H</b>	T2: 8

TOYOTA/LEXUS

pcmflash.ru

v.6


2025-04-29

# PCMflash

Engine Control Unit


## S20A-FTS/T24A-FTS

### S20A-FTS/T24A-FTS

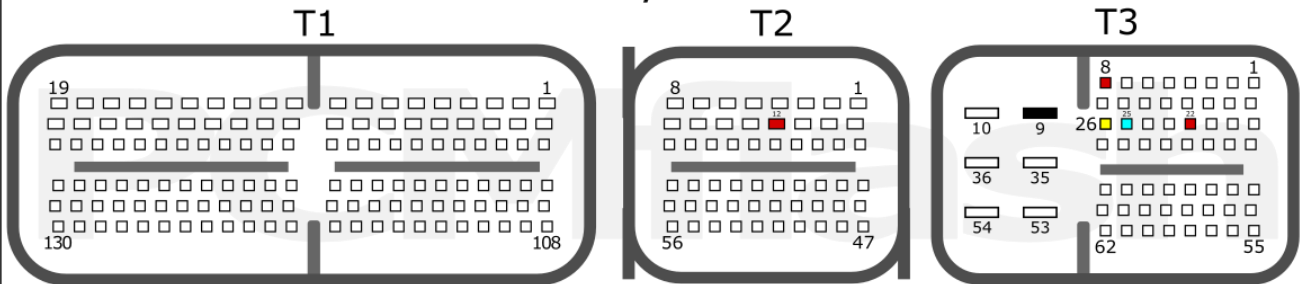

<b>+12V</b>	T2: 12; T3: 8, 22	<b>CAN-L</b>	T3: 25
<b>GND</b>	T3: 9	<b>CAN-H</b>	T3: 26

### T24A-FTS

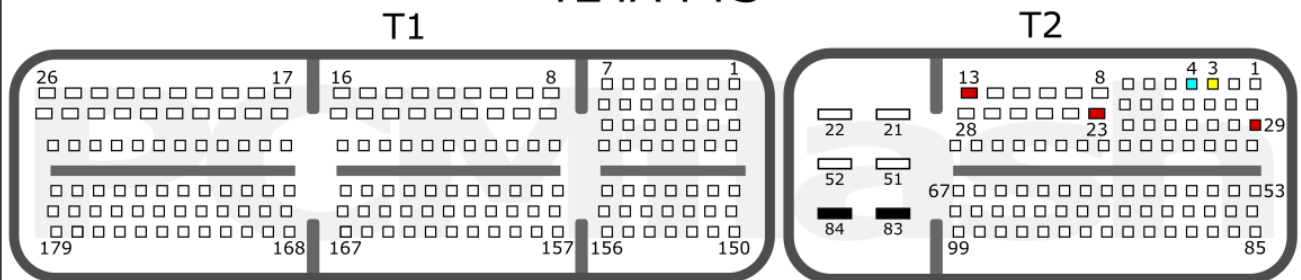

<b>+12V</b>	T2: 13, 23, 29	<b>CAN-L</b>	T2: 4
<b>GND</b>	T2: 83, 84	<b>CAN-H</b>	T2: 3

TOYOTA/LEXUS

pcmflash.ru


v.1

2024-12-11

# PCMflash

Engine Control Unit

## V35A-FTS

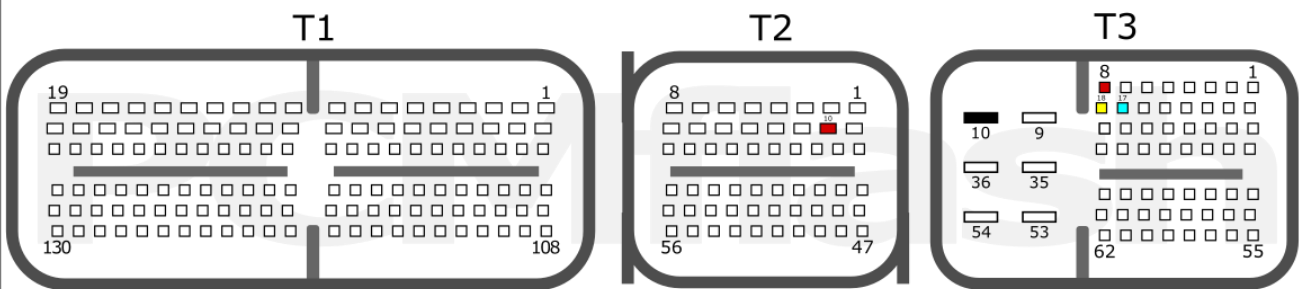

<b>+12V</b>	T2: 10; T3: 8	<b>CAN-L</b>	T3: 17
<b>GND</b>	T3: 10	<b>CAN-H</b>	T3: 18

TOYOTA/LEXUS

pcmflash.ru

v.4

2024-12-11